

SETTING THE HI/LO ALARM

1. Press the MODE button until unit is in the ALARM DISPLAY MODE indicated by the display of current temperature and HI and LO alarm settings.
2. To set the HIGH temperature alarm limit press the HI button, to advance the display in 1° increments, until the desired high temperature is displayed. Press and hold the HI button to rapidly advance the display in 5° increments.
3. To set the LOW temperature alarm limit press the LO button, to advance the display in 1° increments, until the desired low temperature is displayed. Press and hold the LO button to rapidly advance the display in 5° increments.

ALARM

The unit will sound the alarm in both MIN/MAX DISPLAY MODE and ALARM (HI/LO) DISPLAY MODE.

Slide the ALARM ON/OFF switch to ON. When the current temperature display rises above the HI set point, or falls below the LO set point, the alarm will sound for 1 minute and issue a 3 second repeater beep every minute thereafter, for up to 12 hours. The alarm will continue to sound even if the current temperature display returns to an "in range" condition.

To temporarily silence the alarm press either the HI or LO button the back of the unit. The unit is still active and the alarm will sound again if the temperature goes out of range. To permanently silence the alarm slide the ALARM ON/OFF switch to OFF position.

BENCH STAND

The unit is supplied with a bench stand that is a part of the battery cover. To use the bench stand, locate the small rectangular opening at the bottom of the unit. Place your fingernail into the opening and flip the stand up. To close the stand, simply snap it shut.

WALL MOUNTING THE UNIT

Set a screw into the wall at the desired location. Do not set the screw flush to the wall, the head of the screw will need to slip into the receptacle on the back of the unit. Once the screw has been properly set, hang the unit in place by sliding the receptacle on the back of the unit over the head of the screw.

ALL OPERATIONAL DIFFICULTIES

If this thermometer does not function properly for any reason, please replace the battery with a new high-quality battery (see "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties. If the voltage of the battery becomes low °C and °F symbols will flash.

BATTERY REPLACEMENT

Erratic readings, a faint display, or no display are all indications that the battery must be replaced. Slide the battery cover toward the end of the unit. Remove the exhausted battery and replace with an AA alkaline battery (Cat. No. 1111). Replace the battery cover.

WARRANTY, SERVICE, OR RECALIBRATION

For warranty, service, or recalibration, contact:

TRACEABLE® PRODUCTS

12554 Old Galveston Rd. Suite B230

Webster, Texas 77598 USA

Ph. 281 482-1714 • Fax 281 482-9448

E-mail support@traceable.com

www.traceable.com

Traceable® Products are ISO 9001:2018 Quality-Certified by DNV and ISO/IEC 17025:2017 accredited as a Calibration Laboratory by A2LA.

Cat. No. 4048 / 4127 / 4527


Traceable® is a registered trademark of Cole-Parmer.

©2020 Traceable® Products 92-4048-00 Rev. 6 043020

TRACEABLE® MEMORY MONITORING THERMOMETER WITH ALARM INSTRUCTIONS

SPECIFICATIONS

Range:	-58 to 158°F / -50 to 70°C
Resolution:	1°
Accuracy:	±1°C
Sampling Rate:	Fast 10 seconds or Normal 60 seconds (user selectable)
Features:	LCD digital thermometer, internal or external display with maximum/minimum memory display and high/low alarm
Battery:	AA Alkaline

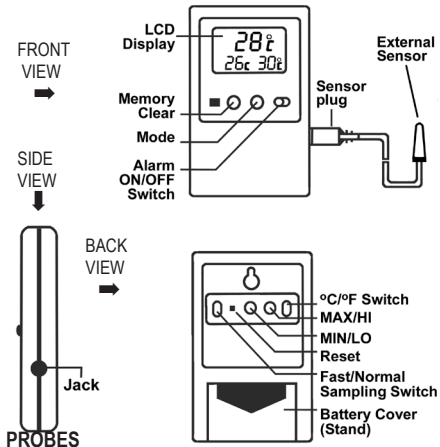

MINIMUM AND MAXIMUM TEMPERATURE VALUES ARE NOT PROGRAMMABLE

4048 Model Probe: A detachable probe sensor and ten feet of cable are supplied with the unit.

A wire probe holder is provided for permanently mounting the probe. To mount the probe, place a nail or screw through the hole of the wireholder and secure the holder to a surface.

4127/4527 Model Probe: Probe is sealed in a miniature bottle (4127: 1 x 2½ inches / 4527: 0.6 x 2 inches) filled with a patented nontoxic glycol. Solution is GRAS (generally recognized as safe) by the FDA (Food and Drug Administration). It eliminates concerns about incidental contact with food or drinking water. The solution filled bottle simulates the temperature of other stored liquids.

Hook and loop tape and magnetic strip are supplied to mount the bottle to the inside of a refrigerator/ freezer and to mount the display unit to the outside. Micro-cable permits refrigerator doors to close on it.

NOTE: Plug probe sensor into the jack on the side of the unit. Press RESET button once whenever probe sensor is removed or inserted. Updated ambient or probe temperatures will be displayed.

With probe sensor attached the unit simultaneously displays current probe temperature and probe minimum/maximum temperatures.

DISPLAY MESSAGES

L L appearing on the display indicates that the temperature being measured is below the temperature range of the unit, or that the probe is disconnected or damaged.

H H appearing on the display indicates that the temperature being measured is above the temperature range of the unit.

RESETTING THE UNIT

Use a pointed object to push the RESET button on the back of the unit. It is necessary to reset the unit whenever a change is made to °C/°F temperature, FAST/NORMAL sampling rate, or the probe sensor is plugged in or removed.

NOTE: HI/LO temperature alarm settings and MIN/MAX memories will be cleared after resetting the unit.

OPERATION MODES

The unit has two operating modes: MIN/MAX DISPLAY MODE and ALARM (HI/LO) DISPLAY MODE. To change from one mode to another press the MODE button once.

MIN/MAX DISPLAY MODE - is indicated by the display of current temperature and the MIN (minimum) and MAX (maximum) temperatures. These temperatures relate to external (probe) temperature if the probe is plugged in and to internal (ambient) temperature if the sensor probe is removed.

ALARM (HI/LO) DISPLAY MODE - is indicated by the display of current temperature and the HI and LO alarm settings. These temperatures relate to external (probe) temperature if the probe is plugged in and to internal (ambient) temperature if the sensor probe is removed.

RESETTING MIN/MAX MEMORIES

There are two ways to reset the memories:

1. To reset both minimum and maximum memories - press MEMORY CLEAR button.
2. To reset individual minimum and maximum memories - press either the MIN or MAX button (on back of unit) once to reset the respective memory. The other memory will remain unaffected.

NOTE: You must be in MIN/MAX Display Mode to reset the memories.

DISPLAYING °F OR °C

To display the temperature readings in Fahrenheit (°F) or Celsius (°C) slide the switch on the back of the unit to °F or °C.

NOTE: The unit must be reset after changing the temperature unit.

SELECTING THE SAMPLING RATE

To select normal sampling rate (60 seconds) or fast sampling rate (10 seconds) slide the switch on back of unit to NORMAL or FAST.

NOTE: The unit must be reset after changing the sampling rate. Using the NORMAL sampling rate will extend battery life.



Calibration complies with ISO/IEC 17025, ANSI/NC SL Z540-1, and 9001



Cert. No.: 4040-1209600C

Traceable® Certificate of Calibration for Therm./Clock/Humidity Monitor

Manufactured for and distributed by : Traceable® Products 12554 Galveston Rd B230, Webster, TX 77598

Instrument Identification:

Model: 4040,90080-06

S/N: 210248494

Manufacturer: Control Company

Standards/Equipment:

Description	Serial Number	Due Date	NIST Traceable Reference
Non-Contact Frequency Counter	26.662025	21 Apr 2021	1000453894
Digital Thermometer	221197993	14 Oct 2021	4000-11621504
Chilled Mirror Hygrometer	44654/2H3737	25 Nov 2021	17811

Certificate Information:

Technician: 126

Procedure: CAL-17

Cal Date: 27 Mar 2021

Cal Due Date: 27 Mar 2023

Test Conditions: 57.75%RH 22.6°C 1012mBar

Calibration Data: (New Instrument)

Unit(s)	Nominal	As Found	In Tol	Nominal	As Left	In Tol	Min	Max	±U	TUR
%RH	N.A.	N.A.		41.63	41	Y	37	47	0.74	>4:1
°C	N.A.	N.A.		23.25	22.7	Y	22.2	24.2	0.076	>4:1
sec/24hr	N.A.	N.A.		0.000	0.133	Y	-8.64	8.64	0.041	>4:1

This certificate indicates Traceability to standards provided by (NIST) National Institute of Standards and Technology and/or a National Standards Laboratory.

A Test Uncertainty Ratio of at least 4:1 is maintained unless otherwise stated and is calculated using the expanded measurement uncertainty. Uncertainty evaluation includes the instrument under test and is calculated in accordance with the ISO "Guide to the Expression of Uncertainty in Measurement": (GUM). The uncertainty represents an expanded uncertainty using a coverage factor k=2 to approximate a 95% confidence level. In tolerance conditions are based on test results falling within specified limits with no reduction by the uncertainty of the measurement. The results contained herein relate only to the item calibrated. This certificate shall not be reproduced except in full, without written approval of Control Company.

Nominal=Standard's Reading; As Left=Instrument's Reading; In Tol=In Tolerance; Min/Max=Acceptance Range; ± U=Expanded Measurement Uncertainty; TUR=Test Uncertainty Ratio; Accuracy=±(Max-Min)/2, Min=As Left Nominal(Rounded) - Tolerance; Max= As Left Nominal(Rounded) + Tolerance;

Nicol Rodriguez

Nicol Rodriguez, Quality Manager

Marisa Elms

Marisa Elms, Technical Manager

Note :

Maintaining Accuracy:

In our opinion once calibrated your Therm./Clock/Humidity Monitor should maintain its accuracy. There is no exact way to determine how long calibration will be maintained. Therm./Clock/Humidity Monitor change little, if any at all, but can be affected by aging, temperature, shock, and contamination.

Recalibration:

For factory calibration and re-certification traceable to National Institute of Standards and Technology contact Control Company.

Issue Date : 27 Mar 2021

CONTROL COMPANY 12554 Galveston RD Suite B230 Webster TX USA 77598
Phone 281 482-1714 Fax 281 482-9448 sales@control3.com www.traceable.com

Control Company is an ISO/IEC 17025:2017 Calibration Laboratory Accredited by (A2LA) American Association for Laboratory Accreditation, Certificate No. 1750.01.
Control Company is ISO 9001:2015 Quality Certified by DNV GL, Certificate No. CERT-01805-2006-AQ-HOU-ANAB.
International Laboratory Accreditation Cooperation - Multilateral Recognition Arrangement (ILAC-MRA).